


Case Study:

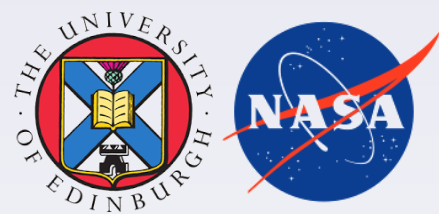

Problem

Need of a system capable of measuring up-welling (reference standard to estimate solar irradiance) and down-welling (the target Earth surface) simultaneously and in two different spectral regions using two different spectrometers: one for the spectral region where the induced chlorophyll fluorescence estimation is possible and one across the wider near-infrared region.

Solution

We manufactured a double bifurcated fibre optic assembly routing light from two different sources to two different spectrometers configured for different wavelength ranges (UV/VIS and VIS/NIR).



Alker contribution: double bifurcated assembly

This assembly has two fibres side by side in each of its two input legs. Both input legs hold fibres of different types: f1 and f2 (f1f2, f1f2). In the junction/central block they cross over into two legs each containing side by side fibres of the same type, f1f1 and f2f2. The legs are armoured and water-resistant. The four legs have a fitted IP68 gland. A 4 Ribbon electrical cable in one input leg splits in 2 ribbon cable in each one of the output legs. The input legs are keyed for alignment (by special construction/design of the connector ferrule).

The whole assembly is armoured and water-resistant with the actual connectors protected by an IP68 gland.

Features

- ▶ 2x2 assembly;
- ▶ Both aligned: connectors with keyway polarisation, and unaligned fibre legs;
- ▶ SMA905 custom connectors specially design to sit both fibres, keyed for alignment;
- ▶ 400um and 600um core fibre;
- ▶ Armoured; Water-resistant;
- ▶ IP68 gland;
- ▶ 4 Ribbon cable in one input leg that splits in 2 ribbon cable in each output leg;
- ▶ Lightweight design for use on in unmanned aircraft (UAV), less than 80g per assembly.

Connecting the future world.....



01342 870 941



sales@alker.co.uk



alker.co.uk

alker
FIBRE OPTIC
SPECIALISTS